

## ASSEMBLY INSTRUCTIONS

1. Remove back assembly (C) from unassembled chair and aside momentarily.
2. Slide the 1 piece back assembly (C) into the square tubes the lower frame assembly (B) so that the holes in the back rest line up with the holes located on horizontal brace of the lower frame assembly (B).
3. Raise recliner lock bar (F) adjust position of back assembly (C) until lock release button (G) positively engages middle slot lock bar link when chair is in storage position.
4. Insert screws through holes of the horizontal brace and tighten all screws with screwdriver.

NOTE: Make sure that the top screw on both sides of the coated square tubing from the back assembly are sufficiently secure before using recliner.

## OPERATING INSTRUCTIONS

### TO PLACE UNIT IN RECLINING POSITION

By Occupant:

Place hands on armrests and push against seat back. Leg rest will automatically adjust to each recline position.

NOTE: The table can only be used in upright sitting position. Patient should be transported in reclined position with recliner lock set.

By Attendant:

1. Ensure that recliner lock bar is in stored position. See Fig. 1.
2. Stand at either side of recliner.
3. Grasp armrest with one hand, and PVC push bar (J).
4. Push down on push bar to recline the back to the first recline position, to achieve second recline position, push on push bar again.
5. To raise upright, pull forward on push bar.
6. Set recliner Lock Bar (F).

## RECLINING LOCK OPERATION

To Lock Recliner:

1. Place recliner into desired position.
2. Pull out Lock-Release Pull Button (G) to release Lock bar (F) from stored position.
3. Rotate recliner Lock Bar (F) down until notches are fully engaged over Locking Pins (H).

To Unlock Recliner:

1. Lift recliner Lock Bar (F) up to disengage from Locking Pins.
2. While holding Lock-Release Pull Button (G) out, rotate recline Lock Bar (F) all the way up until completely against seat back.
3. Release Lock-Release Pull Button (G) to hold recliner Lock Bar in stored position (L).

NOTE: Do not attempt to change position of chair with recliner lock bar engaged. This could cause damage to mechanism.

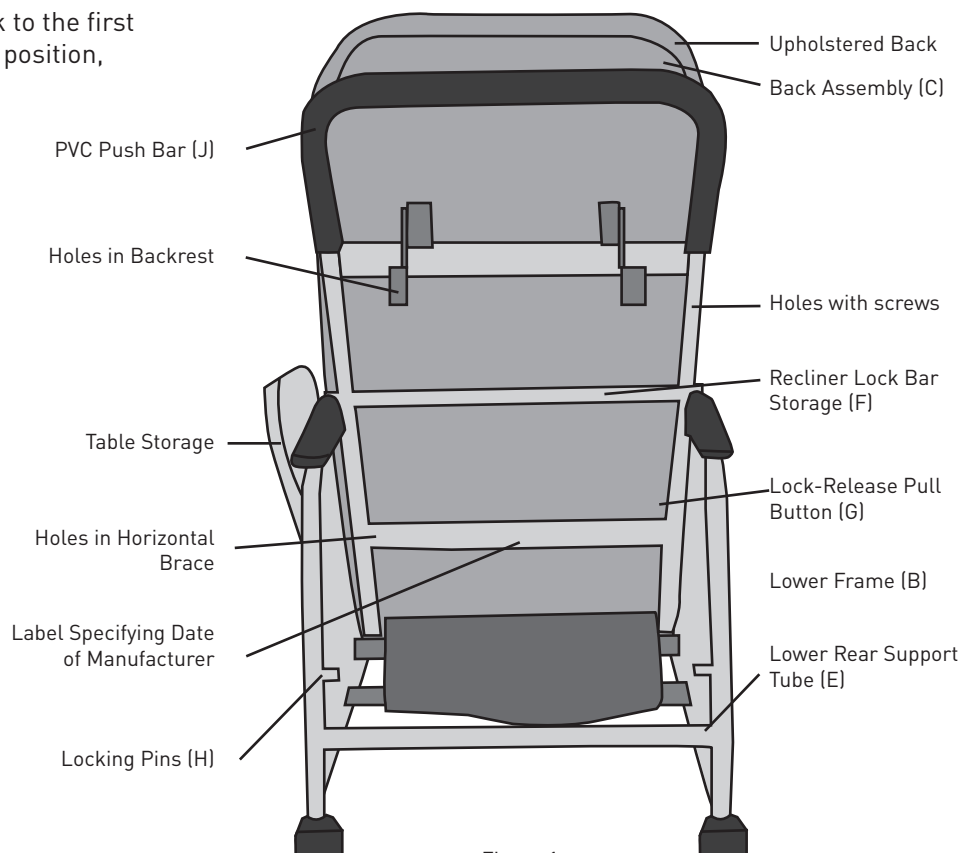 


Figure 1

## OPERATING INSTRUCTIONS

Articulating headrest may be adjusted to desired position by pulling forward or pushing back.

### OPERATING INSTRUCTIONS FOR BLOW MOLDED TABLE

To Operate:

1. Underneath each arm, pull down and hold pull button (Fig.2 A& B) and slide lockout keys forward on both sides (D).
2. Pick up table by circular table arm and slide into receiving tubes in front of each arm.
3. Table can slide on and off by keeping lock/lockout key forward.
4. Table can be locked into one of five positions. Pull down the pull button, hold the pull button and slide the key backwards. Proceed to the other arm and move that key backwards Table will now be locked.

**STORAGE:** The blow molded table stores in the small round tube underneath the left armrest, leaving the tabletop facing out.

## MAINTENANCE & CLEANING

### EVERY THREE MONTHS

- Check and Clean Casters
- Tighten Nuts
- Check Brakes on Casters
- Check and Clean Lock Recline Mechanism

For upholstery maintenance and stain removal, the following hints will be helpful:

**Ordinary Dirt:** Wash with warm water and a mild soap or detergent.

**Stubborn Dirt:** Using a soft bristle brush, follow directions above.

**Ground-in Dirt:** Scrub with powdered cleanser or similar detergent.

**Chewing Gum:** Scrape carefully; remove with kerosene or naphtha.

**Nail Polish and Remover:** Blot immediately to prevent damage.

**Tars, Asphalt, Creosote:** Remove to prevent staining. Clean area with kerosene or naphtha.

Caution: When using kerosene or naphtha, do so in a well ventilated area and keep away from fire and flame.

**Paint, Shoe Polish, Heel Marks:** Remove immediately! Use a white cloth dampened in kerosene, naphtha or turpentine. Do not use paint remover or liquid brush cleaners.

**Ball Point Pen:** Blot immediately with a white cloth dampened in water or mineral oil.

**Waxing and Refinishing:** Improve wearability. Use any quality paste wax.

A diluted solution of 10% (or less) of bleach or Clorox may be used when cleaning this chair.

## IMPORTANT SAFETY GUIDELINES

- Periodically inspect all parts and replace as needed
- Occupant weight should not exceed 250 lbs.
- Caster wheels should be locked during occupant transfer

**CAUTION:** Do not operate recliner by applying force or pressure to the leg rest. Avoid placing hands or legs in creases near recliner mechanism.

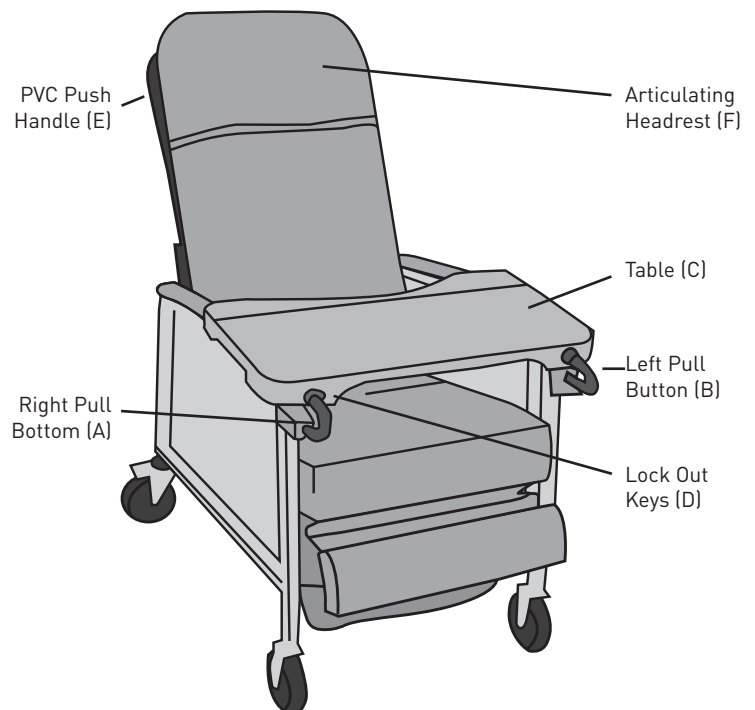 


Figure 2

## PARTS - POWERED BY DRIVE

Back Rest	*D574BACK-( )
Seat	*D574SEAT-( )
Back Support Band	D574p-1001
Upholstered Armrest	*D574p-1005 ( )
Upholstered Legrest/Skirt	*D574p-1008 ( )
Upholstered Footrest	*D574p-1010 ( )
Pull Button Assembly/Armrest Support	D574p-1015
Side Panel, Left	D574p-1018
Side Panel, Right	D574p-1019
Caster, 5", Without Brake	D574p-1025
Caster, 5", With Brake	D574p-1025B
Front Wheel, 5" Diameter	D574p-1027
Lock Nut To Secure Caster To Frame	D574p-1028
Anchor Bolt To Secure Caster To Frame	D574p-1030
Recliner Mechanism, Pair	D574p-1035
Table With Support Tubes	D574p-1038
Whiz Lock Screw	D574p-1040
Recliner Lock	D574p-1042
Headrest Hinge (Right Or Left)	D574p-1045
Table Lock Out	D574p-1047



**WARNING:** This product can expose you to tris (1,3-dichloro-2-propyl) phosphate (TDCPP), which is known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).