
Busy Box Traffic Light - #1810

USER'S GUIDE

The Busy Box Traffic Light offers three colored plate switches (red, yellow and green) designed like a traffic light. As well as turning on lights, when lightly touched the red plate activated music; the yellow plate, a vibrator; and the green plate a buzzer.

Operation:

1. The battery holder is located under the blue cover at the bottom of the unit. Remove this cover by turning the screws counterclockwise with a screwdriver. Observing polarity, install two C batteries into the battery holders. Alkaline batteries are required (Duracell or Energizer brands). Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. Replace the battery case cover. Snug down the screws, but do not over tighten.

Troubleshooting:

Problem: The unit fails to operate, or operates incorrectly.

Action: Make sure there are no obstacles or dirt between the colored plates and the housing of the unit.

Problem: A light bulb burns out.

Action: Unscrew the four screws on the white cover of the unit. Lift the white cover off. Carefully reach under the colored plate covering the burned out light bulb. Unscrew the light bulb, counterclockwise, and replace with a 2.47 volt bulb. If you cannot purchase the bulb from your local hardware, call our Technical Service Department at 1-800-832-8697 for a replacement.

Set the white cover back in place and attach it with the four screws. Be careful not to over tighten, as the pressure of the white plate will activate the switches. If this occurs, loosen the screws slightly.

Care of Unit:

The Busy Box Traffic Light can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Rev 5/5/06