

Tiny, sensitive and affordable, these capability switches are ideal because you can mount them anywhere. They are great to group together to allow the user to activate 3 different devices. They are 3/8"in height and 1" in diameter.

Operation:

- 1. The Compact Switch does not require any batteries to operate.
- 2. Plug the Compact Switch into the jack on your switch-adapted device.
- 3. If it is necessary for you to use an adapter, make sure that you use a MONO adapter, not a STEREO adapter
- 4. Make sure that the connection between the Compact Switch and your device is tight. There should be no gaps.
- 5. Actuate the Compact Switch by either (1) mounting it on a gooseneck mounting system (e.g. using it as a head activated switch). (2) Place it on a table or lap tray and using single finger pressure for activation, or (3) pinching the switch between two fingers, usually the thumb and index finger, to work on prehension skills.
- 6. The device will only remain activated while the Compact Switch continues to be actuated. Once you release the switch, the device will turn off.

Troubleshooting:

Problem: The Compact Switch does not activate your toy/device.

Action #1: Make sure that the connection between the Compact Switch and your device is tight. There should be no gaps. This is a common error and an easy fix.

Action #2: If you are using an adapter, make sure that it is a MONO adapter, not a STEREO adapter.

Action #3: Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

Care of Unit:

The Compact Switch can be wiped clean with any household multipurpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the electrical components. **Do not use abrasive cleaners,** as they will scratch the surface of the unit.

The switch is not waterproof. Please do not place in a location where fluids will spill into the mechanism (drooling, etc.).