
Pull and Play Switch #8042

USER'S GUIDE

3 Interchangeable grips!

Mount this switch to tabletop, wheelchair tray or bedrail for easy access. It comes with 3 interchangeable grips which are a 1 inch multi-colored tactile ball, 4 inch ball with holes and a 3 inch T grip...C- Clamp included. Size: 21"H x 7.5"W x 7.5"D.

Operation:

1. The Pull and Play Switch does **not** require any batteries to operate. The switch is table top or wheelchair mountable with the included C-Clamp. When mounting the switch take care not to over tighten the C-Clamp, as this can cause damage to the surface you are mounting to and also the Switch base.
2. Plug the Pull and Play Switch into the jack on your switch-adapted toy/device. If it is necessary for you to use an adapter, make sure that you use a MONO adapter, not a STEREO adapter.
3. Make sure that the connection between the Pull and Play Switch and your toy/device is tight. There should be no gaps.
4. Chose one of the three included interchangeable grips. Once a grip has been chosen, connect it to the chain via the spring loaded clip.
5. Simply pull on the switch's grip, to activate your toy/device.
6. The toy/device will only remain activated while the Pull and Play Switch continues to be actuated. Once you release the switch, the toy/device will turn off.

Troubleshooting:

Problem: The Pull and Play Switch does not activate your toy/device.

Action #1: Make sure that the Pull and Play is on a flat surface (not tilted or horizontal). This provides for optimal functioning.

Action #2: Make sure that the connection between the Pull and Play Switch and your toy/device is tight. There should be **no** gaps. This is a common error and an easy fix.

Action #3: Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

Action #4: Try a different adapter (if applicable) to rule this out as the source of the problem.

Care of Unit:

The Pull and Play Switch can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.