
**Medium Oval Textured Switch
w/Latch/Timer -#711-X**

USER'S GUIDE

Triples your options! This ingenious box turns any momentary switch into a latch or timed switch. In the momentary mode, your toy or device will stay on as long as you maintain pressure on the switch. In the latch mode, your device will turn on when the switch is pressed once and will turn off when the switch is pressed again. In timed mode, your toy or device will stay on for a preset amount of time (0 to 120 seconds). The time can be adjusted from 0-120 seconds by turning a knob. Size: 4½" x 2½" x 1".

Requires 1 9-V Battery

OPERATION:

1. Carefully turn over unit to reveal battery compartment. Insert one 9 Volt battery into the holder.
2. Turn the power on by sliding the **ON/OFF** control button located on the side of the unit to the **ON** position.
3. The **Mom/Time/Latch** button is located next to the **ON/OFF** button on the side of the unit. Select the mode by sliding the button to the desired mode.
4. Plug a switch into the cord jack marked **SWITCH**, and insert the **DEVICE** cord into the jack of the toy/device you wish to operate.

AVAILABLE MODES:

Momentary:

In this mode, the unit operates as a momentary switch. The toy or device stays on as long as the switch is activated.

Timed:

In this Mode, the unit operates as a timed switch. The toy or device goes on for a set amount of time (1-120 seconds) when the switch is activated.

If the unit fails to operate, or operates incorrectly, the following steps should be performed:

- Turn the unit off and replace the battery.
- Replace with a new alkaline battery only (e.g. Duracell, Energizer brand). Do not use rechargeable or non alkaline batteries in this device. They do not provide enough power for the Switch Modifier to work.

Latch:

In this mode, the unit operates as an On/Off Switch. The toy or device goes On with the first activation and stays On until the second activation of the switch.