

Mounting Options:

The Infinity Mirror Wall Panel has 4 mounting holes for wall mounting. **Please Note:** Mounting hardware is not included. You can use standard wall anchoring hardware found at hardware stores and Home Improvement Centers. Please consult one of their hardware associates for the proper mounting hardware based on your wall construction. In addition we also offer our Track System when mounting 3 or more Panels item No. 3116.

Infinity Mirror Wall Panel #2268

USER'S GUIDE

Pass your hand in front of the panel and see a never-ending tunnel of multi-colored LEDs light up while calming piano music plays. Some low room light required. *Size: 13"L x 15"W x 3¾"H. Requires 4 C Batteries. Weight: 6 lbs.*

1. The Infinity Mirror Wall Panel requires 4 C batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located under the magnetically held compartment on the top of the panel. To access the compartments lift up the access door and then remove the Phillips Head screws from each battery compartment cover. Install the C batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level of the music. **Please Note:** Each time you pass your hand in front of the panel and see a never-ending tunnel of multi-colored LEDs light up while calming piano music plays.
Please Note: Some low room light required for activation.

Troubleshooting:

Problem: The Infinity Mirror Wall Panel's lights or music do not work when activated.

Action #1: Make sure the ON/OFF/VOLUME knob switch is turned.

Action #2: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: The Infinity Mirror Wall Panel does not play music.

Action #1: Make sure the ON/OFF/VOLUME knob is turned ON and set at an audible level.

Action #2: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: The Infinity Mirror Wall Panel does not work at all.

Action: Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

Care of the Unit:

The Infinity Mirror Wall Panel can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.