

# USER MANUAL

*Osaki* OS-AA12

## DEEP Kneading NECK&SHOULDER MASSAGER

WITH HEATING THERAPY



— **TABLE OF CONTENTS** —————

<b>Before use</b> .....	<b>01</b>
<b>Safety advice</b> .....	<b>02</b>
<b>Storage</b> .....	<b>05</b>
<b>Disposal</b> .....	<b>05</b>
<b>Warranty</b> .....	<b>05</b>

## Before use

- Check if there is any damage in the product.
- Operation
- Plug in 110V/60Hz

### ▪ Buttons

#### 1. Power button

Press once, and the product will start working. The product will automatically power off after 15 minutes of operation. The default mode operates at low intensity and without heating. The light will go out after all functions are turned off.

#### 2. Direction change

When the product is turned on, press it to switch the massage nodes in a clockwise-anticlockwise-clockwise direction. The default direction is clockwise.

#### 3. Intensity button

When the product is turned on, press it to switch to low intensity, mid intensity, or high intensity.

#### 4. Heating

Press once to heat; the light turns red accordingly.

Press a second time to stop heating, and the light goes off.

### ▪ Technical data

Input Voltage : AC 100-240V 50-60Hz

Rated voltage : DC 120V / 2A===

Timer : 15 min

## Safety Advice

### KEEP ALL SAFETY NOTICES AND INSTRUCTIONS FOR FUTURE REFERENCE!

Read all safety advice and instructions. Non-observance of the safety advice and instructions may cause electric shock, fire, and/or serious injuries.

#### WARNING!

#### ▪ **Danger to life and risk of accident for infants and children**

The product is exclusively designed for massaging people's backs. It is intended for private use only and is not suitable for commercial purposes. The product is not a children's toy. Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injuries incurred through improper or incorrect use.

#### CAUTION

This product is not a toy for children. Children are not aware of the dangers associated with handling electrical products.

- This product can be used by children aged 8 years and above, as well as by persons with reduced physical, sensory, or mental abilities.
- Capabilities, or the lack thereof, and the extent of experience and knowledge become crucial when individuals are provided with supervision or instruction regarding the safe use of the product and understanding the associated hazards. Children should not engage in cleaning or user maintenance without proper supervision.

**⚠ CAUTION**

This product is not a toy for children.

Children are not aware of the dangers associated with handling electrical products.

- This product can be used by children aged 8 years and above, as well as by persons with reduced physical, sensory, or mental abilities.
- Capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the product in a safe way, and understand the hazards involved. Children should not clean or perform user maintenance unsupervised.

**⚠ CAUTION**

The product has a heated surface. Persons insensitive to heat must be careful when using it.

 **WARNING!**

### Avoid the hazard of life by electric shock

- Do not insert needles or pointed objects into the product.
- Never immerse the product into water or any liquid.
- Never touch the product or the mains power adaptor with wet hands, or use it in very humid environments.
- Only use the provided mains power adaptor as described in the Technical Data section.
- Make sure that the details on the rating label are in conformity with your main voltage.
- In the event of malfunctions, remove the mains power adaptor from the mains socket.
- Do not open the product or attempt to repair it yourself.
- Defective products should only be repaired by qualified personnel.
- Always remove the mains power adapter from the mains socket after each use and before cleaning the product.
- Keep the power cord away from hot surfaces, sharp edges, and mechanical forces.
- Never let the power cord become a trip hazard, so that no one can get tangled in it or tread on it.
- Allow the product to cool down before moving it to a different location.

 **WARNING!**

### Hard of fire

- Do not operate the product close to or below curtains, wall cupboards or other inflammable materials.
- Do not use the product on swollen, burnt, inflamed, diseased, or injured regions of the skin and body. If in doubt, consult a medical professional before using the product.
- Never use the product if you have injuries or neck pain.

## Storage

- Let the product completely cool down before storage.
- Do not place other objects on top of the product.
- If the product is not used for a certain period of time, store the product in a clean and dry location.

## Disposal

- The packaging is entirely made of recyclable materials, which can be disposed of at local recycling facilities.



Observe the marking of the packaging materials for waste separation, which are labeled with abbreviations (a) and numbers (b) with the following meanings: 1-7 for plastics, 20-22 for paper and fiberboard, and 80-98 for composite materials.



The product and packaging materials are recyclable; dispose of them separately for better waste treatment. The Triman logo is valid in France only.



Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.



To help protect the environment, please dispose of the product properly when it has reached the end of its useful life, and not in household waste. Information on collection points and their opening hours can be obtained from your local authority.

## Warranty

- The product has been manufactured according to strict quality guidelines and meticulously examined before delivery.