


**302-141 Rabbit Hutch (Portable)**

**\* IMPORTANT \***

Please retain this instruction sheet in your files. It contains important replacement parts information. All equipment should be installed in accordance with these instructions. It is important to use and maintain all public playground equipment properly. Playground equipment, which is improperly maintained, can cause serious injury. Periodical inspections, maintenance, repair and/or replacement of damaged parts is necessary for safe operation of equipment and safety of users. Resilient surfacing should be used under all playground equipment. Appropriate publications, available at no charge, from the Consumer Product Safety Commission, include "A Handbook for Public Playground Safety". You can receive your free copy by calling 1-301-504-0708.

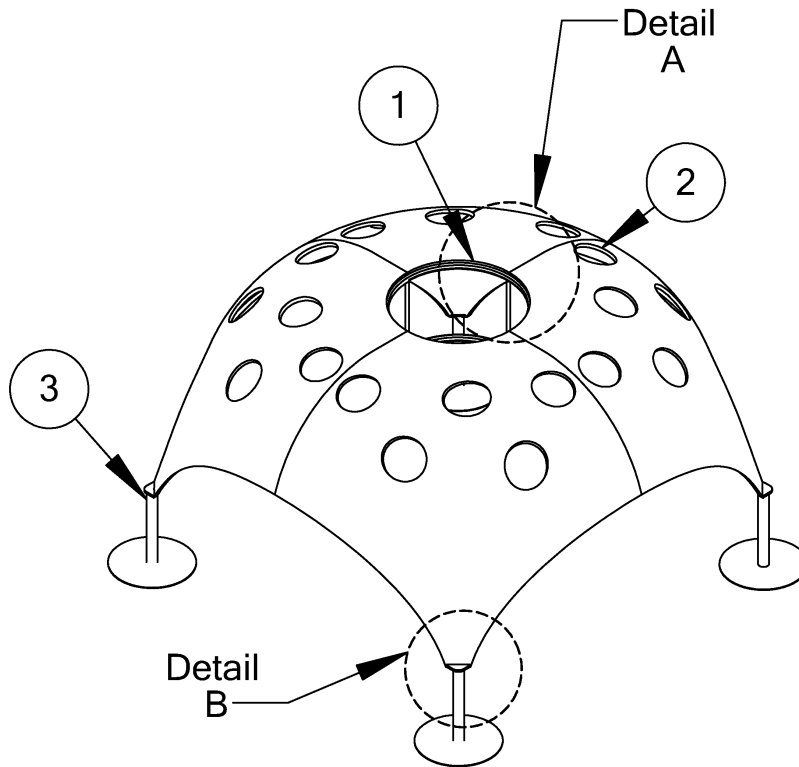

**PACKING LIST**

1	CTN	1	Hardware Bag
1	CTN	1	113-306 2 Ring Ladder
1	SKID	1	113-044 Shell
1	CTN	4	303-901 Shell Leg


**HARDWARE BAG**

4	315-961	1 5/8" Black Cap
4	116-608	3/8" x 2" Hex Head Bolt
4	116-535	5/16" x 1 1/2" Button HD Bolt
4	216-512	5/16" Button Head Nut
4	326-501	5/16" Lock Washer
2	416-350	3/16" Socket Key
4	326-601	Lock Washer
1	805-532	Warning Label
1	805-534	SportsPlay Label
1		Maintenance Checklist



3 CTN	1 SKID	4 TOTAL PCS	WT 210#	CLASS 70
-------	--------	-------------	---------	----------

**GENERAL USE/FALL ZONE & FOOTING RECOMMENDATIONS**

Stationary & Portable equipment - Use/Fall Zones should extend a minimum of 6 feet in all directions from the perimeter of the equipment ground space. This area should be covered with the required amount of resilient safety surfacing material. For some equipment - Use/Fall Zones can overlap. See Consumer Product Safety Commission Guidelines. Diameter & Depth of footings illustrated are satisfactory in most applications for pipe sizes up to 2 3/8" diameter. Varying soil & climatic conditions may require deeper & heavier footings in some areas. Check local building codes.

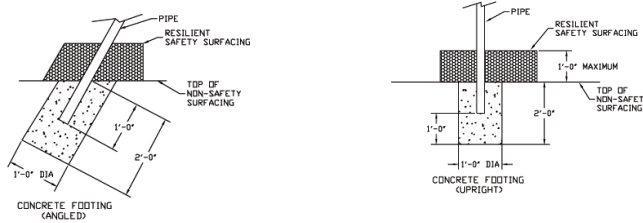


\* If resilient surfacing is to be less than 12", then additional pipe should be put in concrete to maintain proper finish grade for equipment.

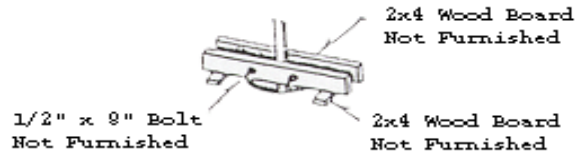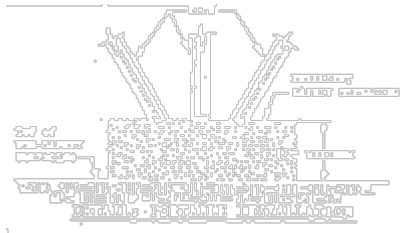

Suggested Bracing Method

**USE AREA & FOOTING LAYOUT:**

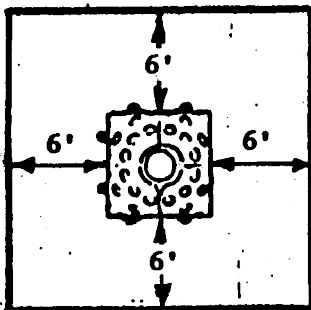

**USE ZONE  
17' x 17'**

## 302-141 Rabbit Hutch (Portable)

Page 3 of 3  
Rev 02/20/2020

### GENERAL ASSEMBLY INSTRUCTIONS:

Check all parts and hardware with the packing list to insure you have received everything needed to assemble this product. Contact your SportsPlay distributor with notification of any missing or damaged parts. Contact MUST be made within ten days of receipt of your order.

Check MONTHLY for loose bolts, damaged or broken parts. Tighten and/or replace immediately. On swings and any equipment that uses S-Hooks and/or Swing Hangers check the bearing surfaces for wear. Replace any parts that show a reduction of 25% from the original size.

### ASSEMBLY AND INSTALLATION:

**NOTE:** All threaded ends of bolts protruding beyond nuts must be cut off and/or peened to eliminate sharp edges. No more than two threads should extend beyond face of nut. All washers "T" nuts, and other fastener hardware used on round pipe or tubing must be hammered down to conform to the curved underlying surface to eliminate catch points. DO NOT tighten nuts more than hand-tight until entire assembly is completed.

STEP #1: Place Ring Ladder onto ground with ring that has four (4) holes in it facing upwards.

STEP #2: Invert the shell, turning it upside Down, placing it on top of the 2 Ring ladder.

STEP #3: Attach the 2 Ring ladder to the shell using hardware specified in Page 1 sketch.

STEP #4: Install black plastic caps over open end of legs.

STEP #5: Attach shell legs to shell.

STEP #6: Check and tighten all bolts and nuts.

STEP #7: Turn completed assembly right side up.

STEP #8: Attach warning label and Manufacturer's Identification label to a clean surface. The labels should be attached in a location where they are clearly visible and legible and away from normal hand and foot placement areas. The labels must be replaced if they become illegible, destroyed or removed. Contact your SportsPlay distributor for replacements.