

WIRELESS DOORBELL INSTALLATION

Model # DB4-MC

INSTALLATION

1. Remove your Silent Call Medallion Series wireless doorbell transmitter from its packaging.
2. Place the doorbell transmitter firmly against the wood frame on the outside door trim, approximately 48 inches up from the doorsill. Note that if the doorbell transmitter is mounted to a metal surface, the range will be greatly reduced.
3. Using a pencil, mark each screw hole on the mounting surface. Remove the doorbell transmitter from the wood trim.
4. Using a small nail or other sharp pointed object, make a starter hole for transmitter case screws (included).
5. Screw transmitter to door trim making sure printing on the case is right side up.
6. To test operation of transmitter, press doorbell button. This will cause your Silent Call Medallion Series receiver to operate.

CHANGING BATTERY

1. Remove doorbell transmitter from doorframe and slide battery cover off, exposing battery.
2. Remove battery and install new 23AE, 12 volt alkaline battery.
3. Make sure polarity (+ & -) is correct when installing new battery.

OPERATION

1. Whenever the doorbell transmitter button is pressed, a coded wireless signal is sent to any Silent Call Medallion receiver programmed to learn the transmitter, causing it to activate.
2. Transmission range using a Silent Call Medallion Series receiver is about 500 feet.

Transmitter Settings

The Silent Call Medallion system is digitally encoded. All Silent Call Medallion Series receivers are capable of receiving one million different codes and the transmitters are preset at the factory to send one of the million different codes. Please refer to your receiver manual for instruction on teaching the transmitter code to the receiver.

Technical Support

For technical support on this or any other Silent Call product, please feel free to contact us. You can reach us by phone at 800-572-5227 (voice or TTY) or by Email at support@silentcall.com

Limited Warranty

Your transmitter is warranted to be free of defects in material and workmanship for five years from the date of initial purchase. During that time, the unit will be repaired or replaced free of charge when shipped prepaid to Silent Call Communications. This warranty is void if the defect is caused by customer abuse or neglect.

