

ConvaQuip BARIATRIC HOMECARE BED Models: 5639 and 5648

Owner's Operation Manual

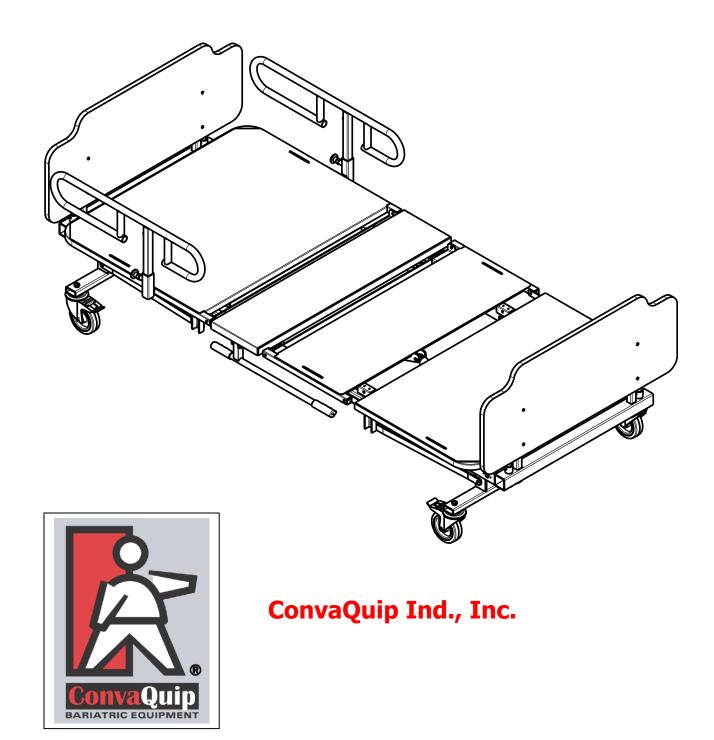

Contents

PARTS LOCATOR	2
SAFETY NOTES (WARNINGS AND CAUTIONS)	3
- WEIGHT LIMIT	4
- POWER REQUIREMENTS	4
INTENDED USE & PRODUCT DESCRIPTION	5
FUNCTION & BASIC OPERATION	6
SETUP INSTRUCTIONS	7
ASSEMBLY INSTRUCTIONS	8
OPERATING THE BED	9
ACTUATORS, CONTROL & HANDSET	11
DIAGNOSTIC & REPAIR	12
CLEANING & MAINTENANCE	13
SPECIFICATIONS	14
WARRANTY	15

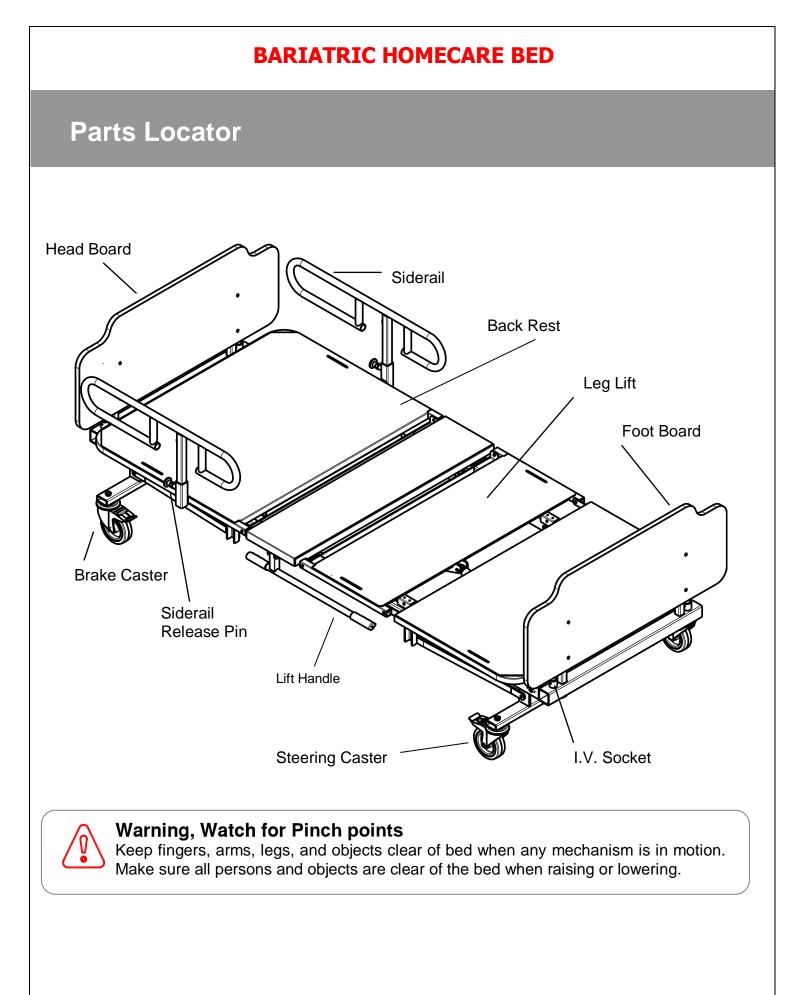

Safety Notes



Warnings and Cautions

You must heed the following warnings and cautions. Failure to observe these safety precautions may result in personal injury or mechanical failure. Read all instructions carefully before using the bed.

- Always raise the side rails whenever the patient is lying on the bed in the supine position
- Always lock all casters and align parallel to the patient before use.(see pg 2)
- Take special care to lock the casters securely when reclining or inclining the bed or when transferring the patient to or from the bed.
- Place bed in level position when transferring the patient to or from the bed.
- Do not confuse the head end and foot end of the bed when placing the patient in the supine position.
- The mattress should be sufficiently wide enough to prevent any part of the patient's body from falling between the side rails and the mattress.
- Make sure all persons and objects are clear of the bed when raising or lowering the bed. Do not place arms or head into frame while operating.
- Moving parts. Watch for pinch points. Keep fingers, arms, legs, and objects clear of bed when any mechanism is in motion.
- Keep all objects out from under the bed. Certain parts under the bed raise and lower when the bed is in motion. Make sure there is nothing under the bed to interfere with proper bed operations.
- Do not allow the patient to sit on the bed when it is in the highest position. Lower the bed to the lowest position before allowing patient to sit on the bed.

Intended Use & Product Description



Warnings and Cautions

You must heed the following warnings and cautions. Failure to observe these safety precautions may result in personal injury or mechanical failure. Read all instructions carefully before using the bed.

- Weight Limit: Never exceed the weight limit of your bed (combined weight of user and items on bed.) Exceeding weight limit may cause bed to fail. The capacity is on the head end of deck and on the serial number label.
- **Power Requirements:** Electrical hazard may occur if device is plugged into inadequate power supply. A power source of 120 VAC 50 to 60 Hertz with a capacity of at least 15 Amperes must be available to operate the bed. A three wire grounded receptacle must be supplied. A GFCI is recommended. (Max Current Drawn by the bed is 9 Amperes)
- Do not service this device without first unplugging the power cord.
- Make sure the <u>control module</u> and the <u>handset</u> cords are properly positioned before operating the bed. Do not allow either of these cords to get caught in the moving members of the bed
- Do not operate this device if the power cord or any of the cords between the control module and the associated parts are cut, frayed for loosely connected
- Do not use a bed with any missing or damaged parts

Never disassemble your Bariatric bed.

Intended Use & Product Description

3-Function Homecare Beds are designed for bariatric patients. The bed is ideal for long term use in the home or nursing care centers. It is intended for all age groups with varying medical and physical conditions. Total weight capacity of the bed is shown on page 14.

THREE 3-FUNCTIONS

1) Raise and lower head 2) Lift and lower leg and foot section 3) Elevate bed height

- Power functions are powered by 24-volt DC electric actuators.
- Electrical Power: 120 volt AC power transformer converts system to 24-volt DC. Electrical actuators, handset, and transformer meet CE, UL, ETL & CSA listing.
- Power plug: Three-prong hospital type plug, grounding meets NFPA standards.
- Construction: Constructed entirely of steel, solid frame, powder coat painted.
- Side Rails: Head end, two position, drop down style.
- Foot End Side Rails (optional): two position, drop down style.
- Casters: Heavy Duty Five 5 inch casters. Two individual locking-type (head end) and two steer type (foot end)
- Accessory sockets: One IV socket on each corner of bed.
- Delivery: Bed frame is easily disassembled into two pieces for ease of handling.


Function & Basic Operation

The **Three-Function Homecare Bed** has electric drive actuators <u>to operate the back rest</u>, <u>the leg lift</u>, and <u>to raise and lower the bed</u>. To control the positioning on these beds use the 6-button, 3-function handset.

HEAD UP \uparrow **and HEAD DOWN** \downarrow buttons raise and lower backrest (head end)

The FOOT UP \uparrow **and FOOT DOWN** \downarrow buttons raise and lower knee and leg sections


The BED UP \uparrow and BED DOWN \downarrow buttons raise and lower the bed

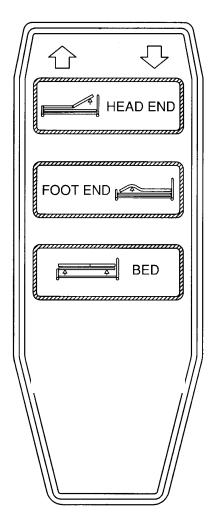

Setup Instructions

To Assemble:

- Step 1. Lock head & foot end casters parallel to frame & oriented as shown.
- Step 2. Move bed into position as shown and hook foot end frame over head end frame round bar.
- Step 3. Connect both actuator cables from foot end of frame to head end of frame.
- Step 4. Swing lift handle out and slowly lower bed. Keep both hands on handgrips until bed has been completely lowered to reduce the risk from pinch areas.
- Step 5. Insert quick release pins on both sides of frame.

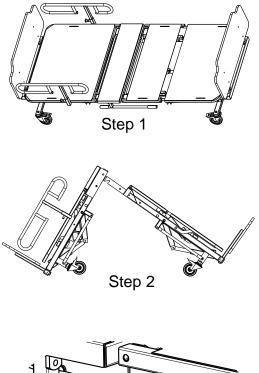


Step 3


Setup Instructions

To Disassemble:


- Step 1. Completely lower bed and all bed sections.
- Step 2. Lock head & foot end casters parallel to frame & oriented as show.
- Step 3. Remove quick release pins on both sides of frame.
- Step 4. Swing lift handle out and slowly lift bed. Keep both hands on handgrips until bed has been completely lifted to reduce the risk from pinch areas.
- Step 5. Disconnect both actuator cables from foot end of frame to head end of frame.
- Step 6. Lift foot end frame away from head end frame.

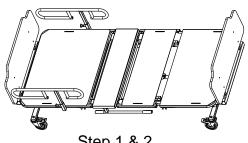

Step 1 & 2

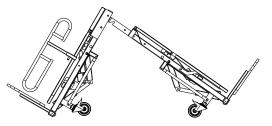


Step 4

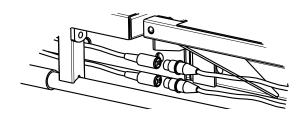

Step 3

Assembly Instructions

- 1. Install the headboard posts in the square sockets provided at the head end with the board closest to the mattress. (page 2)
- 2. Install the footboard posts in the square sockets provided at the foot end with the board away from the mattress. (page 2)
- 3. Install the siderails as shown on page 2.
- 4. Install the lift handle with bolt and lock nut. Be sure that lift handle is in the correct orientation (see picture below).

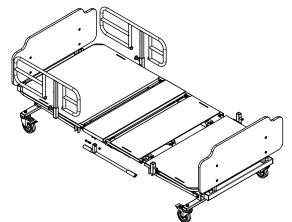

Perform the following checks before using the bed:

- 1. Do a careful walk around inspection of the bed. Look underneath the bed to make sure there is nothing stored there. This area must be kept clear to avoid any interference with bed parts, which move during operation.
- 2. Lock the casters (two individual lock and two steering control type casters) rotate steering casters until they lock in place.
- 3. Plug the power cord into a 120 volt grounded socket with a capacity of at least 15 amperes. Using the handset, cycle the bed through all of its operations. (see pg 6) Make sure that everyone (including you) is clear of the bed during these operations. See that:
 - a) All power bed operations work smoothly and stop in any desired position.
 - b) Bed height, angle of the leg lift and backrest can be adjusted properly.
- 4. Position the side rails, be sure they slide up and down properly
- 5. When you are satisfied that the bed is operating properly, instruct all personnel who may be involved in the bed operation.

Operating the bed

Steering the bed

The bed can be steered in two modes, with the steering locked or with all four casters able to move independently. The two casters on the foot end are the "steer" control type. (page 2)

Foot end: Using the steering lock function

The steering lock function allows you to easily steer the bed in a straight line.

At the foot end of the bed, step down on the front of either caster pedal until it clicks, then move the bed in a straight line about 3 feet backward or forward to lock. This action will keep the caster from swiveling and allow better forward and backward movement. The bed can now be moved with greater stability. Push the bed from the head end. Do not lock the other steering caster.

Using the 4-caster free function

To allow the bed to be rolled alongside a stretcher, unlock all four casters.

To unlock, step down on the back of the control pedal on each caster as shown in the illustration.

Locking the Casters

The locking function holds the bed motionless when the bed is parked. Lock all casters when transferring the patient to and from a bed. Casters are the individually locking type. For stability when parking the bed, the casters should be positioned as shown on page 2.





"Unlocked"



CAUTION

The caster lock is not designed to stop a bed that is in motion. Do not operate the caster control pedal while moving the bed, otherwise an injury or accident may occur.

Operating the bed

Upright Back Position

The Backrest stops at any angle between 0 degrees (horizontal) position and an upright position of about 50 degrees.




Warning

Before operating the backrest always ensure that casters are locked. Otherwise an accident or injury may occur.

SIDERAIL ADJUSTMENT

Head end side rails are located on each side of the bed. Side rails have a 2-position vertical adjustment.

To raise or lower side rail, grab top section of rail with one hand while pulling the <u>Release</u> <u>Knob</u> with the other hand. Pull side rail up or down as required. Allow the <u>Release Knob</u> to spring back into locked position.

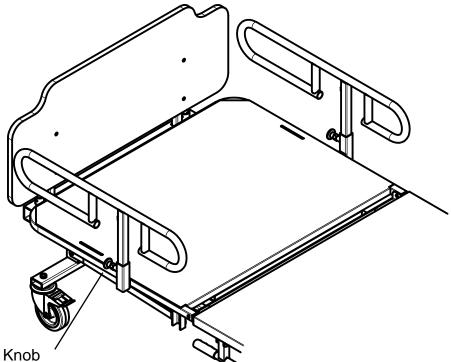


Release Knob



WARNING

Make sure side rails are securely locked into posistion. Otherwise an injury or accident may occur.

Actuators, control & handset

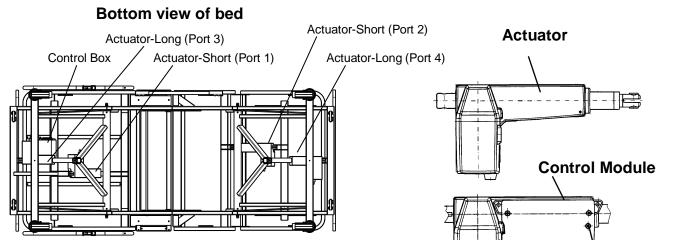

LINEAR ACTUATORS

The bed is equipped with 24V DC Linear Actuators designed with built in travel limit switches. Each actuator is equipped with quick release pivot pins (3/8" x 2") on both ends. If disassembled retain pivot pins and hairpin clip.

CONTROL MODULE


The Control Module is designed to control all actuators in the system. The Control Box mounts directly on one of the actuators as shown. Retain with screw (#8 x 1 $\frac{1}{2}$ ").


HANDSET

The Handset is used to control all actuator functions. When not in use, Handset hooks on the top of the siderail.

NOTE:

Before removing connectors from control module, remove plastic retainer strip. The retainer strip must be reassembled after connectors are plugged back in. Assure that all connectors are fully plugged in.

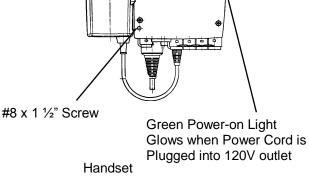

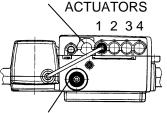

Power Cord w/Green Ground Wire

CONTROL MODULE WIRING DIAGRAM

GROUND WIRE

Green wire from power cord connects to bed frame. Secure with screw and star washer.

Diagnostic & Repair

PROBLEM	CAUSE	SOLUTION		
No functions operate	No power to unit	Check power cord. Is it plugged into receptacle? Check cord for breaks.		
Green Power-on light does not glow	Electrical power cord not properly plugged into control module			
Power cord plugged in but no functions		Check for power to receptacle.		
operate	Bad handset	Replace handset.		
	Bad control module	Replace control module.		
Three actuators operate "OK" one actuator will not operate	Bad control module	ISOLATE THE PROBLEM Interchange connections on control		
	Bad handset	module so that problem actuator is plugged into an actuator connection		
	Bad actuator motor	on the control module that is working satisfactorily. If problem actuator now operates "OK" but actuator that was operating "OK" now has a problem, either the control module or handset is faulty. Replace as required.		
Actuator will not function properly Or not at all	Defective wiring	Check wiring between control and actuator. Reverse wires.		
	Defective Actuator Motor	Replace actuator		
Bed not grounded	Unit is not grounded between power cord and frame or between power cord and wall	Check ground (green wire) between frame and power cord		
	receptacle	Is power cord plugged into a grounded wall receptacle?		

Cleaning & Maintenance

Warning: Before cleaning any portion of bed, disconnect power cord from the wall outlet. Do not use a power washer to clean bed.

Caution: Before using any cleaning product, test it on the underside of the bed. Never use any volatile or flammable fluid (thinner, gasoline, etc.) that could cause discoloration or deterioration.

CLEANING

Use mild soap and water or a nonabrasive hospital-grade detergent disinfectant to clean the bed. Wet a cloth with the cleaning product and wring dry. Then gently wipe off the bed. Use caution when cleaning around the electrical connections to prevent shock to the person or damage to the electrical components.

PERIODIC INSPECTION AND MAINTENANCE

The amount of maintenance required by the bed will be dictated by its use.

Depending upon usage, inspect the bed after one to two weeks of usage and then at a minimum of every six months.

Before two weeks and then every six months minimum thereafter

- 1. Check all the bolts to be sure that none have worked loose.
- 2. Check that all pins are in their locked position and securely fastened.
- 3. Check all welds.
- 4. Check all electrical connections for tightness

Every six months minimum

- 5. Lubricate all slides and pivot points with FDA approved light grease.
- 6. Check all electrical wiring for any frays, kinks and or deterioration.
- 7. Lock and steer castors operate properly.

ANY DISCRPANCIES NOTED DURING INSPECTION MUST BE CORRECTED BEFORE USING THE BED.

Specifications

Product name: ConvaQuip Bariatric Homecare Bed Models: 5639, 5648 650 LE						
Dimensions:						
Maximum Overall Width	41-1/2" 50-1/2"	Models: 5639 Models: 5648				
Overall Length	90" with headboard and footboard installed					
Models	Pan W		Pan Length			
5639 5648	39" 48"		84" 84"			
Mattress Pan Height	Above floor, adjusts from 15-1/2" to 32"					
Weight	347 Poun	ds				
Back angle	0 to 50 de	grees				
Note:						

All Dimensions are approximate.

Defective parts will be repaired or replaced by the company or its appointed agent. The warranty does not cover damage caused by misuse or negligence, nor does it cover defects or damages by use of unauthorized parts or service by an unauthorized person.

ConvaQuip, Inc. warrants the bed frame to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. Wear items including, but not limited to: casters, actuators, control module, handset, power cord, cables, bearings, pins, release knob, and mattress are warranted to be free of defects in material and workmanship for a period of one (1) year. If within such warranty period any such products shall be proven to be defective, such product shall be repaired or replaced, at the company's option. This warranty does not include any labor or shipping charges incurred in replacement part installation or repair of any such product. The company's sole obligation and your exclusive remedy under this warranty shall be limited to such repair and/or replacement.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

For warranty service please contact ConvaQuip, Inc. Return authorization is required. Do not return products without our prior consent.

FREIGHT DAMAGE: The carrier who delivers merchandise to your door is responsible for loss and damages. Acceptance of the shipment by you is acknowledgment that all articles delivered were in good condition and properly packed. Therefore, all claims for loss or damage must be filed immediately with the freight carrier. Then notify us. We will mark our records accordingly. After settling claim, damaged merchandise will be picked up by the freight carrier and returned.