




Padded Interior Installation

1. Bed should be completely assembled but mattress not installed before pads are installed.
2. Pads come with adhesive backed Velcro™ strips already installed. When you are ready to install a section of padding, remove the adhesive backer and press firmly in place making sure to press along the entire Velcro strip.
3. Starting with the doors, align the door pad with the bottom edge of the door and centered on left to right.
4. On electric models there will be an additional strip that goes on the fixed side rail below the doors. Align this with the top of the side rail and centered between corner posts
5. On headboard and footboard, center between posts and align top with where the pad stopped on the doors.
6. On hi side beds, there is a large back panel pad that should be centered between posts and aligned with the top of the pad on head and footboards. On the high side model, this back panel pad may cover the seam between the back panel and side rail.

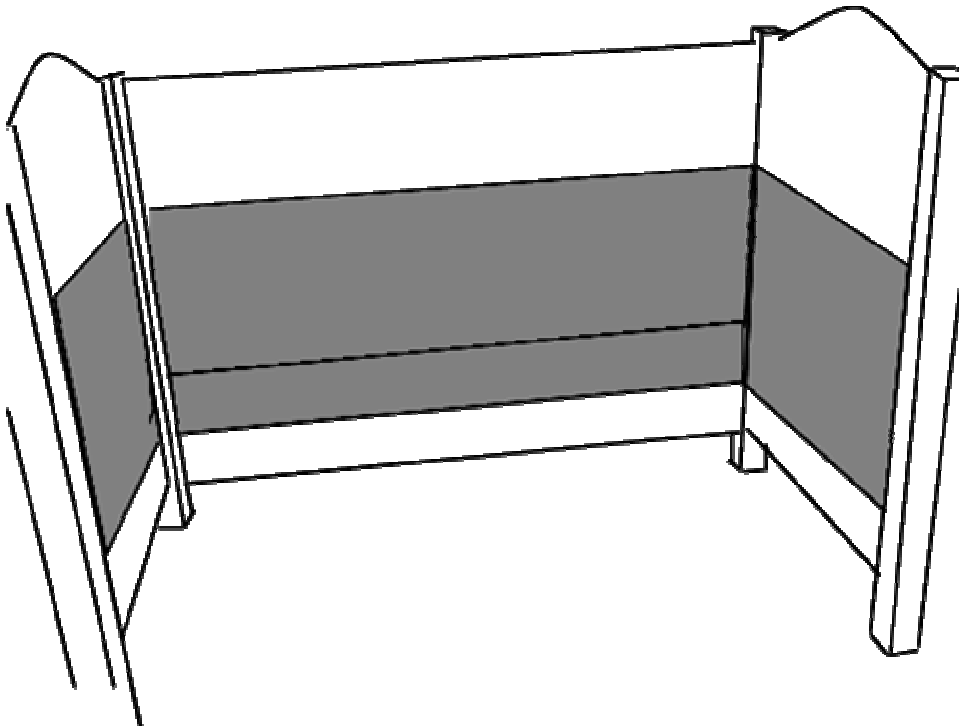

NOTE: if a BBG bed is designed to use interior padding, it must always use padding to prevent unsafe gaps which may result if the pads are removed.