




FREEDOM CONCEPTS INC.

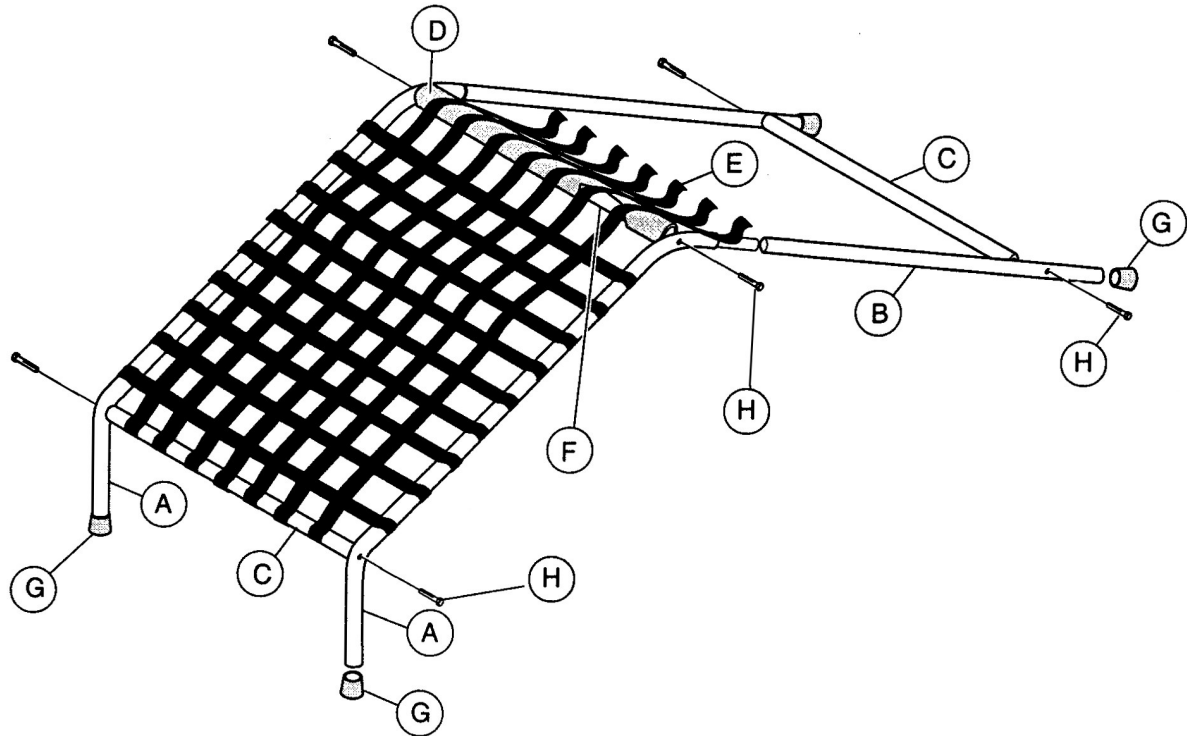

<u>Item</u>	<u>Qty:</u>	<u>Description</u>
(A)	2	Side Frame Tube (Rear)
(B)	2	Side Frame Tube (Front)
(C)	2	Cross Bar
(D)	1	Foam Padding
(E)	1	Poly Webbing
(F)	1	Central Cross Bar
(G)	4	Rubber End Cap
(H)	6	6mm-1.0 x 50mm Flat Head- Hex Socket Cap Screw

Assembly Instructions:

- 1- Insert small end of side frame rear (A) to end without hole of side frame front (B)
- 2- Insert A&B through loop on poly webbing (E)
- 3- Insert both ends cross bar (C) through loops on (E)
- 4- Attach A&B using bolt (H) to cross bar (C) (hand tighten only)
- 5- Insert cross bar (F) through foam (D) and attach using bolt (H)
- 6- Tighten all bolts
- 7- Insert rubber end cap (G) through ends of frame (A&B)