

# M2 ATI

GLIDE  
WEAR.

Available with GlideWear®  
Technology.



\*Zero Elevation with GlideWear® Pictured




ADJUSTABLE TECHNOLOGY INSERT (ATI)

# E2624 / E2625

## ADJUSTABLE SKIN PROTECTION & POSITIONING

### PRODUCT FEATURES

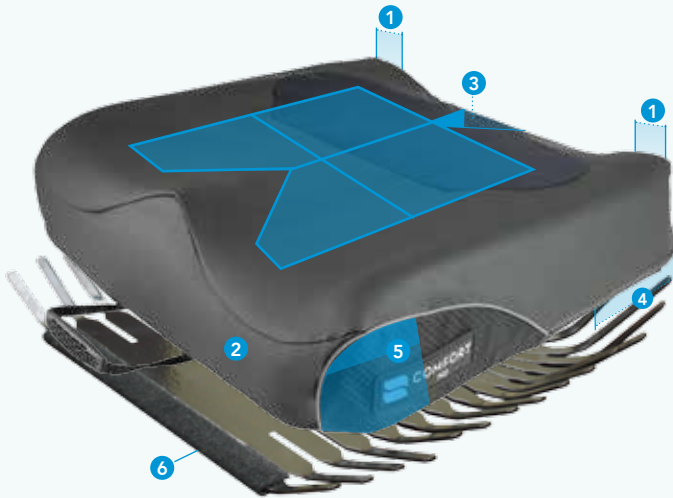

1. Tapered adductors increase in width near the rear of the cushion to give support to the greater trochanters.
2. Deep lateral and medial leg contours promote postural alignment.
3. Coccyx relief cutout reduces pressure on the tailbone and spine.
4. Non-skid bottom fabric offers hook and loop attachment.
5. Constructed with dual density foam, a molded foam base, and Quadra3D® Gel pack.
6. Moldable ATI base allows for on-site customization to effectively meet the needs of the user. The dynamic nature of input provides positioning support while allowing for movement. The ATI base can be remolded to meet changes in both physical and functional needs.

### QUADRA3D® GEL



Four compartment Quadra3D® Gel is designed to prevent gel migration. Quadra3D® Gel regulates body temperature by retaining heat and redistributes pressure to provide maximum comfort.

DIMENSIONS	Zero Elevation	Anti-Thrust	Wedge
16" x 14" and smaller			
Seat Thickness	3"	2.75"	3.25"
Inferior Thigh Support Thickness	2.5"	3"	3"
Medial Thigh Support Height	.75"	.75"	.75"
Lateral Thigh Support Height	1"	1"	1"
Pelvic Contour Height	1"	1"	1"

WEIGHT CAPACITY	
14" Wide & Under	200 lbs
16" Wide	250 lbs
18" Wide	300 lbs
20" Wide	350 lbs
22" Wide & Wider	400 lbs

DIMENSIONS	Zero Elevation	Anti-Thrust	Wedge
16" x 16" and larger			
Seat Thickness	4.25"	3.75"	4.25"
Inferior Thigh Support Thickness	3"	3.75"	4"
Medial Thigh Support Height	1.25"	1.25"	1.25"
Lateral Thigh Support Height	1.5"	1.5"	1.5"
Pelvic Contour Height	1.5"	1.25"	1.5"

### AVAILABLE STYLES

#### ZERO ELEVATION

#### ANTI-THRUST

#### WEDGE

### STANDARD SIZES

	10" W	12" W	14" W	16" W	18" W	20" W	22" W	24" W
10" D	10 x 10	12 x 10	14 x 10					
12" D	10 x 12	12 x 12	14 x 12	16 x 12				
14" D	10 x 14	12 x 14	14 x 14	16 x 14	18 x 14			
16" D	10 x 16	12 x 16	14 x 16	16 x 16	18 x 16	20 x 16	22 x 16	24 x 16
18" D		12 x 18	14 x 18	16 x 18	18 x 18	20 x 18	22 x 18	24 x 18
20" D			14 x 20	16 x 20	18 x 20	20 x 20	22 x 20	24 x 20
22" D				16 x 22	18 x 22	20 x 22	22 x 22	24 x 22
24" D					18 x 24	20 x 24	22 x 24	24 x 24

Additional Sizes Available

### M2 ATI PART NUMBERS

Cushion Style	Stretch-Air™	Comfort-Tek™
Zero Elevation	M2-SM-WWDD	M2-FM-WWDD
Anti-Thrust	M2-SAM-WWDD	M2-FAM-WWDD
Wedge	M2-SWM-WWDD	M2-FWM-WWDD
	Stretch-Air™ + GlideWear®	Comfort-Tek™ + GlideWear®
Zero Elevation	M2-SQM-WWDD	M2-FQM-WWDD
Anti-Thrust	M2-SQAM-WWDD	M2-FQAM-WWDD
Wedge	M2-SQWM-WWDD	M2-FQWM-WWDD

WWDD to be replaced / WW = width & DD = depth in inches

### CLINICIAN TIP

Achieves pelvic stability and lower extremity positioning through moderate contour