




## Assembly Instructions

# 30-51-0306 Pull Steering Bar for AM-9S & AM-9XS

Installation for AM-9S, AM-9XS

- 1) Remove nylock nuts and remove bolts.
- 2) Slide steering collar over steering stem as shown in photo.
- 3) Slide bolt through hole and thread nylock nut on and tighten

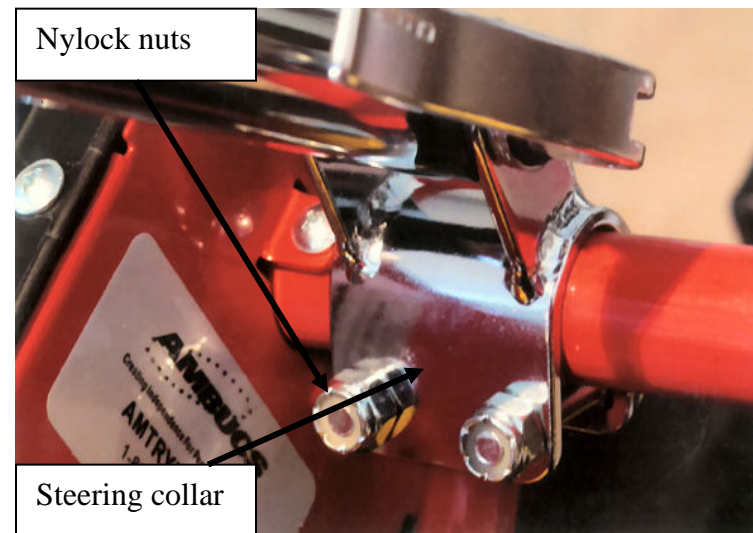

- 4) To loosen or remove handle lift quick release lever and rotate thumb nut counter clockwise.  
When the lever is adjusted correctly it should lift up and fold down without adjusting the tension.

