

zPod TV Installation Guide

Step 1. Find all the needed materials. For the first steps, you will need the bracket, 2 of the short bolts, two washers, two nuts, and the level from the TV mounting kit. The drill bit, Phillips bit, and white cover caps are from the zPods hardware kit.



Step 2. Mark holes for hanging the bracket. Place the level on the bracket and hold the bracket centered on the wall. Mark holes on the second from last holes on each side along the top row.






Step 3. Drill a hole **COMPLETELY** through the wall in the center of each mark that you just made.



Step 4. Take a short bolt, a white cover cap, a washer, and a nut.



Step 5. From the outside of the zPod, put the bolt with the white cover cap through the hole you just drilled. The bolt will come through the other side.

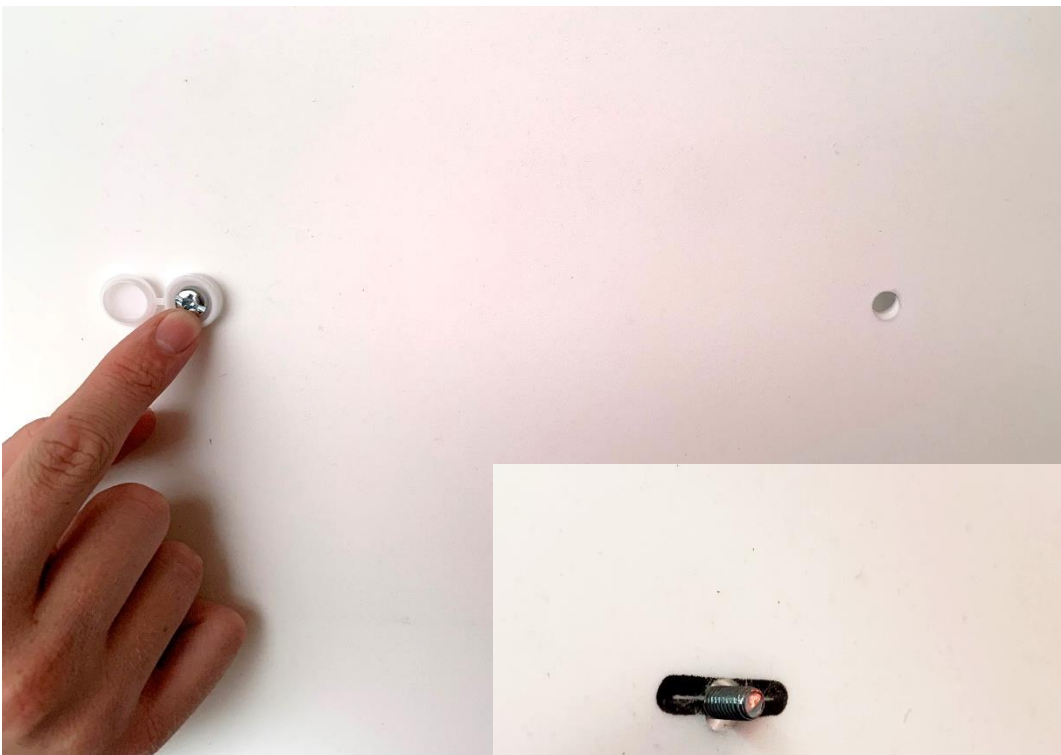

Step 6. Place a washer and a nut over the bolt.




Step 7. Use pliers or a wrench to hold the nut in place while you tighten the bolt from the outside.




Step 8. REPEAT steps 5 though 7 for the other bolt.

Step 9. Find all the needed materials. For the next steps, you will need the 2 braces, 4 of the short & thin bolts, and 4 washers.

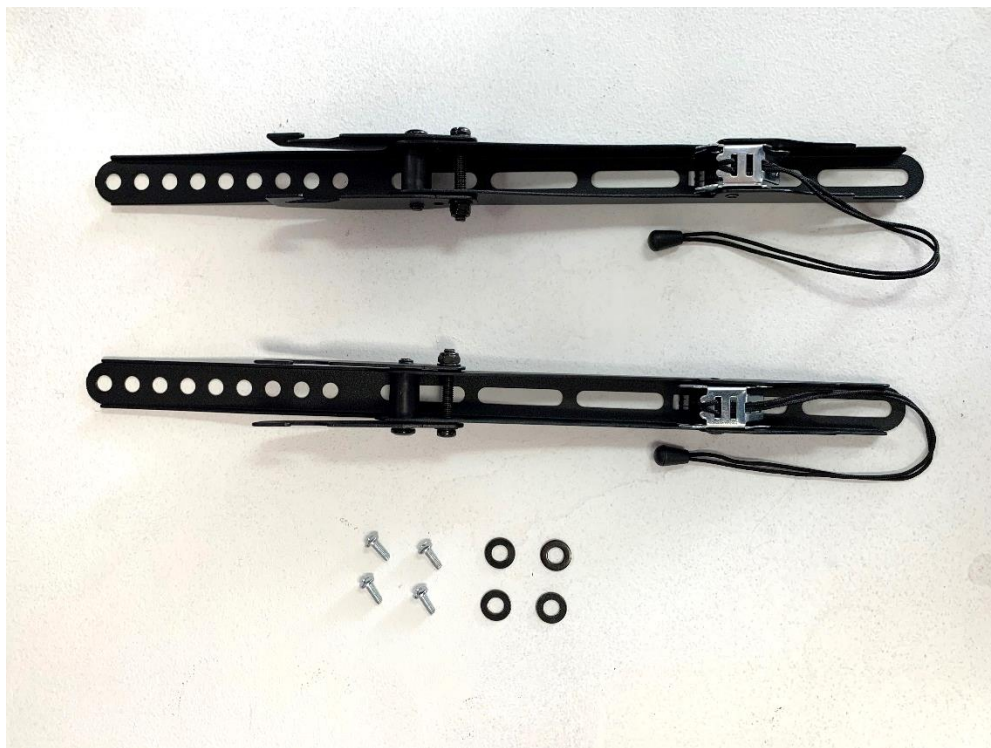


Step 10. Align the braces on the back of the TV. The holes on the TV should align with the 5th hole from the top, as pictured below:

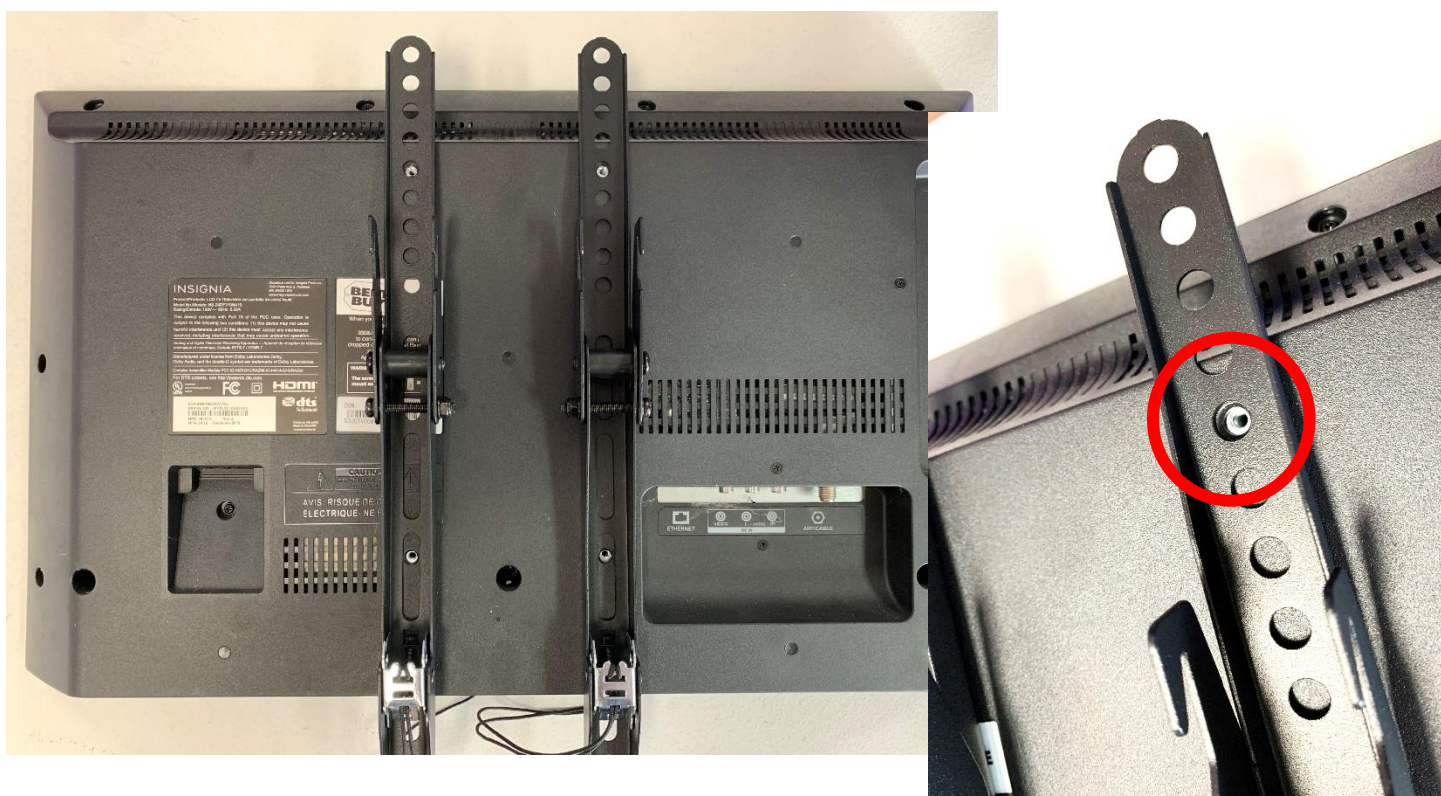


Step 11. Put all 4 screws with washers into the designated holes in the TV.



Step 12. Mark a place to drill the hole for the TV power cable like shown:

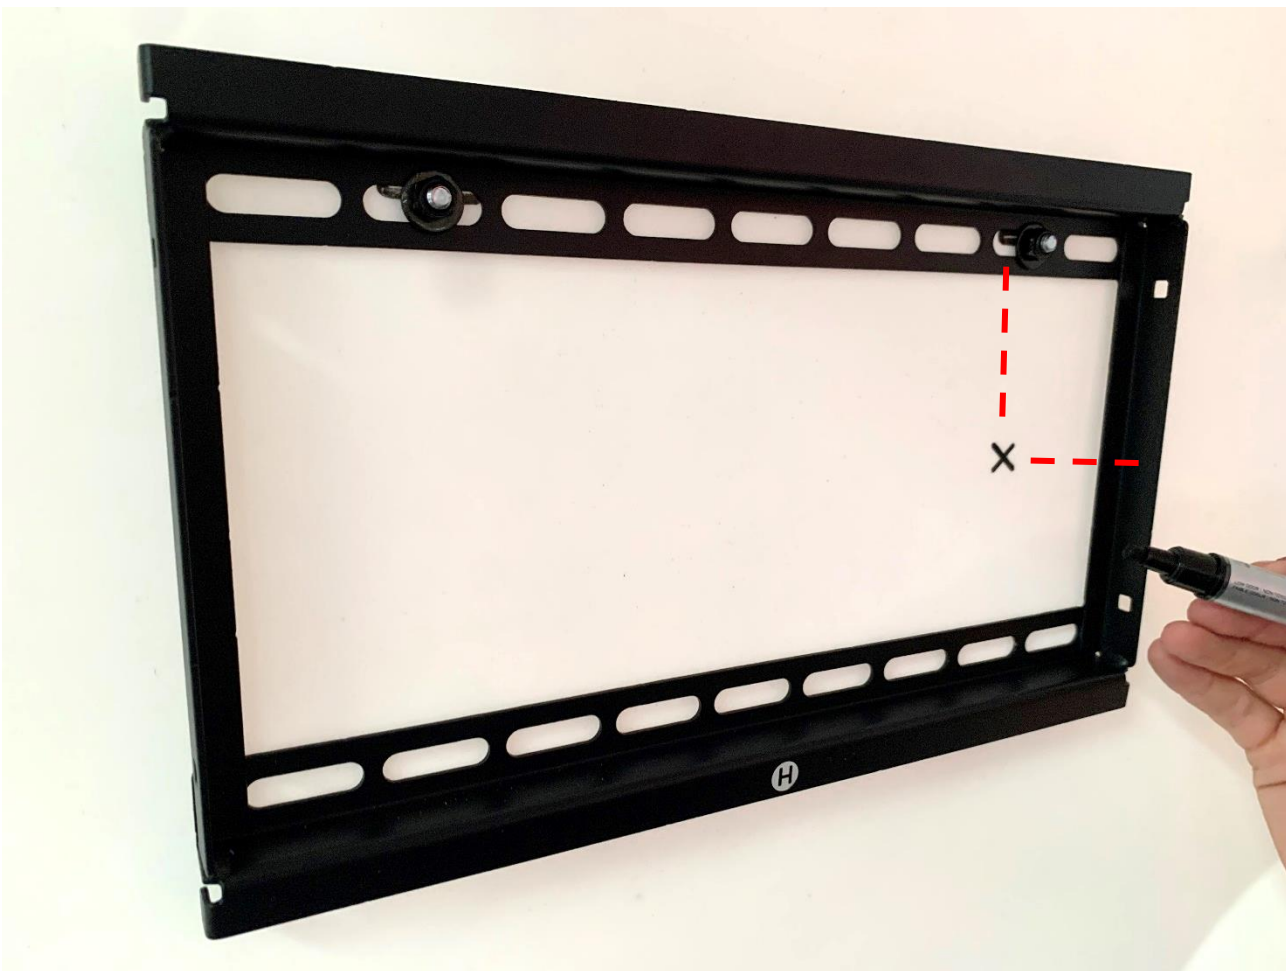

Step 13. Drill a hole COMPLETELY through the mark you just made. Use the drill bit to widen the hole enough for the smaller end of the TV power cable to fit through.

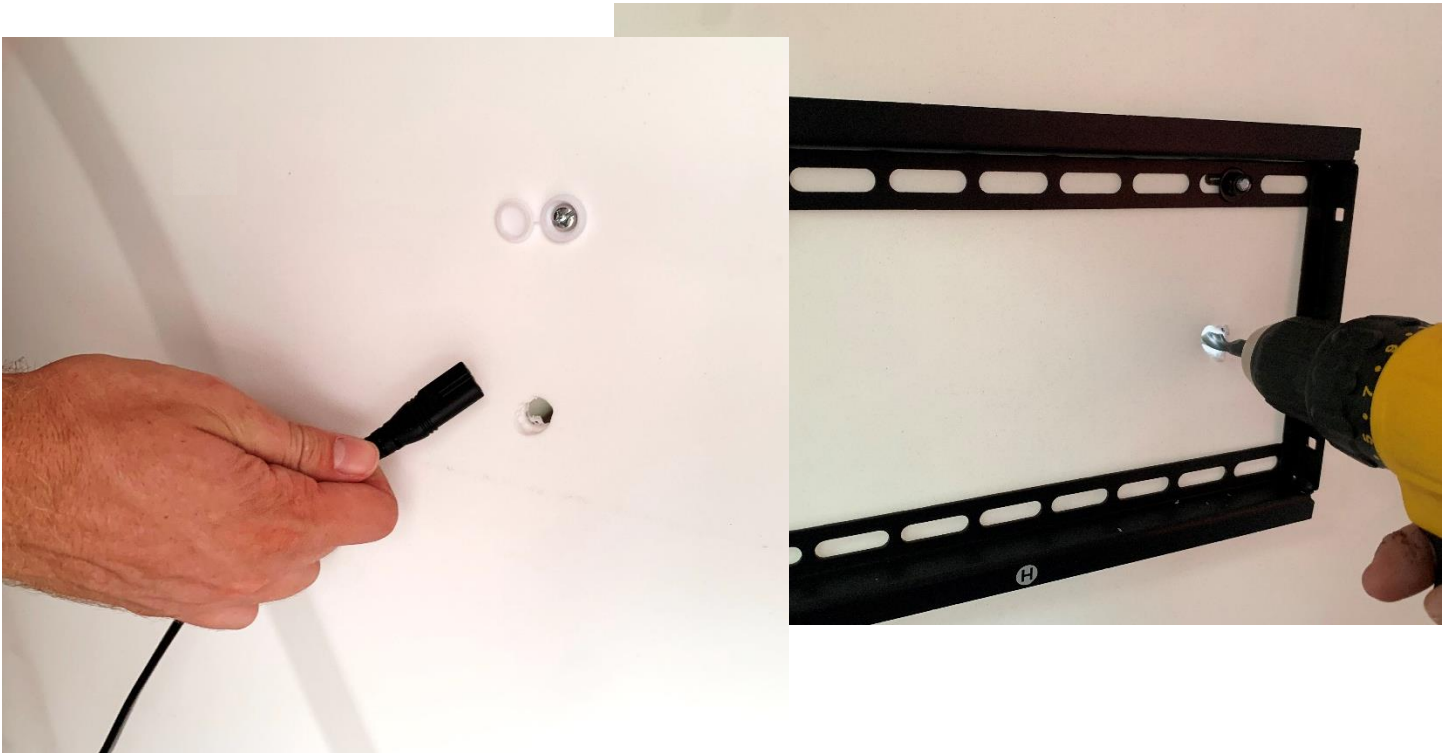

Step 14. Feed the cable through the hole and plug it into the TV.



Step 15. Use the hooks on the braces to mount the TV on the bracket. Adjust as needed and your TV is now installed!

