


HOW TO FASTEN THE GLASSLESS MIRROR PANEL TO A WALL.

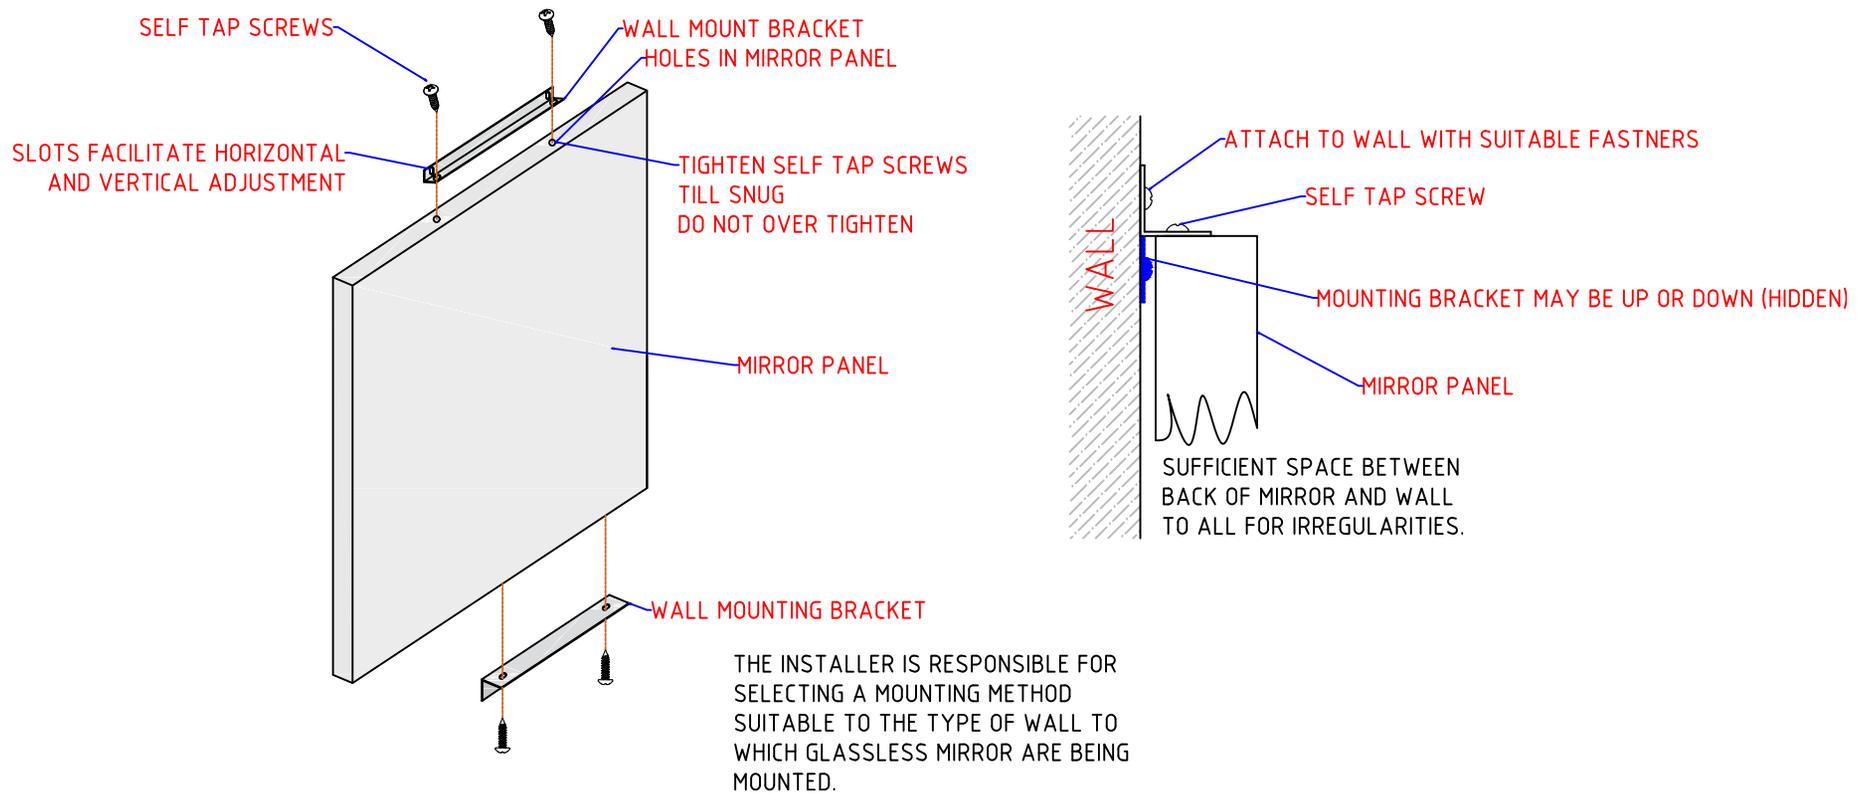



GLASSLESS MIRROR PANEL INSTALLATION INSTRUCTIONS

Your glassless mirror panels are provided with two wall mounting (installation) devices: a set of four (4) self-adhering foam pads (3M No. 4004) and two (2) mounting brackets (see reverse side of sheet)

The type of wall on which you plan to install the mirrors will suggest which of the two mounting devices to use. The self-adhering pads work best on a very smooth, clean surface; the mounting brackets on a rough surface or irregular wall.

Self-Adhering Foam Pads:

1. The back of each mirror panel has four self-adhering mounting pads, one on each corner.
2. Mark the position of the mirror panel on the wall and clean the surface where the pads will adhere. Any dust, dirt or grease will prevent the adhesive from working properly.
3. Remove the protective paper exposing the surface of the adhesive on all four pads and position the mirror panel on the wall. Apply light pressure at each of the four corners of panel frame, not on the mirror surface, to be sure that the four pads are fully adhered.

Mounting Brackets:

1. Locate position of mirror panel on wall marking the spots for the mounting slots of both brackets.
2. Drill the four holes in the wall using a drill size suitable to the type of wall fastener you intend to use.
3. Attach the brackets to the wall (in the exposed or hidden position).
4. Attach the brackets to the mirror panel, in the predrilled holes at the top and bottom edges, using the self tapping screws provide with the brackets. The slots allow the mirror panel to be moved slightly from side to side and up and down, making alignment with other panels easier.
5. See other side of sheet for illustrations.